

NUMERO	FUNZIONE
1	Pin n°1 2-way connector for the connection of the Ground
2	Pin n°2 2-way connector for D+ signal or Ignition Key
3	M6 screw connector for Positive of Starting Battery
4	M6 screw connector for Positive of heavy loads or inverter
5	M6 screw connector for Positive of Service Battery
6	3-way connector to manage the compressor of the air conditioner

3. INSTALLATION INSTRUCTIONS

For proper installation of the device, follow the instructions below.

3.1 Install the device

Provide a space for storing the SMART-LINK as close as possible to the Service Battery and the inverter, but never in the engine compartment or in rooms that are not protected against atmospheric agents. Unscrew the two screws on the front, lift the cover and slide it out for easy access to the connection points.

ASSEMBLY SCHEME:

